

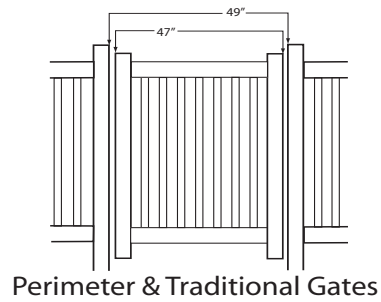


Gate Assembly Instructions

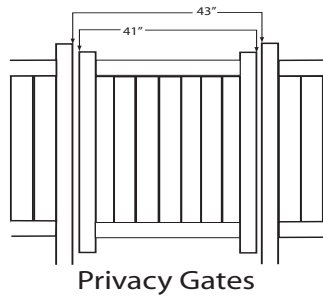


Note: To cut the gate to custom size, cut the rails 2 1/4" shorter than the desired opening width between the posts. You will also need to rip the pickets to match the narrower size by the same amount that you cut the rails.

1. Assemble gate by laying the gate top and bottom rails on a flat non abrasive surface. Now Insert Pickets into the rails. (Figure 1)

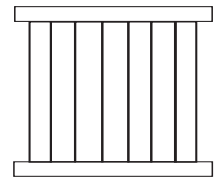


2. Take the Left gate upright and insert all the way into the top and bottom rails. Using the #10 x 2 1/4" screw supplied (Figure 2b), drive the screw through the clear washer into the predrilled holes of the uprights and rails. Then fasten nut on the reverse side. Now cover the screw head and nuts with vinyl caps supplied. Take the right gate upright and do the same. (Figure 2)


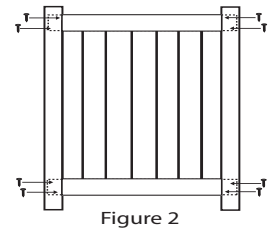


Install steel gate corner thru top of each post and fasten to top rail with (2) 3/4" screws (Figure 2c)


Privacy/ Gate Upright & Rail Assembly

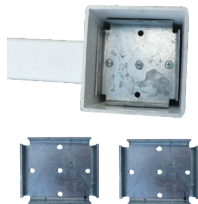

Perimeter/Traditional Gate Upright & Rail Assembly

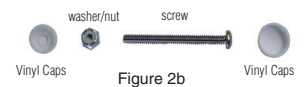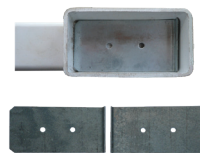

3. Install caps on top of the gate uprights using PVC glue. Note: The top of the gate uprights is marked as "top" on the inside of the uprights. (Figure 3)

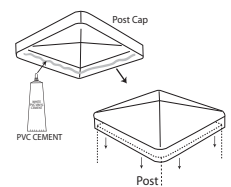

Still Have Questions?
Call us at 1-800-483-1361

